Manualslib.com - Easy to Read Manuals



# Prym MINI, 611 915, 611 916, 611 920 Manual

# Contents


1. Introduction
    1.1. Intended use
    1.2. Scope of delivery
2. Product overview
3. Operation
    3.1. Preparing the unit
    3.2. Setting the mains voltage
    3.3. Filling the water tank
    3.4. Switching the unit on
    3.5. Ironing with steam
    3.6. Switching the unit off
4. Troubleshooting
    4.1. The appliance cannot be switched on
    4.2. No steam dispensed
    4.3. The temperature indicator flickers or remains dark
    4.4. The appliance hums or heats up sharply
5. Cleaning
6. Storage
7. Technical data
8. Safety
9. Documents / Resources
    9.1. In Other Languages
    9.2. Other ManualsLib Projects



## Introduction

The following symbols and signal words are used in these operating instructions, on the appliance or on the packaging.

| | |
|---|---|
| ⚠ | Heed the warnings and follow the safety information. |
| ⌂ | Use the appliance only in weather-protected locations. |
| ⚠ **DANGER** ⚠ | Immediate danger to life or very serious injury. |
| ⚠ **WARNING** ⚠ | Serious injury, potential danger to life. |
| | |

| | |
|---|---|
| ⚠ **CAUTION** ⚠ | Light to medium injury. |
| **Attention!** | Danger of damage to property. |

Note:
The term appliance is also used in these operating instructions to refer to the steam iron.

These operating instructions are applicable to the following products:

- MINI steam iron, with Euro Schuko plug (611 915)
- MINI steam iron, with UK plug (611 916)
- MINI steam iron, with CH plug (611 920)

## Intended use

The steam iron is designed exclusively for drying and ironing clothes, fabrics and textiles. With its compact size the steam iron is particularly suitable for small areas that are difficult to reach. Because the mains voltage can be selected, the steam iron can be used worldwide.
This appliance can be used by children aged 8 years and over and by persons with reduced physical, sensory or mental capabilities or lacking experience and knowledge if they are supervised or have been instructed in the safe use of the appliance and understand the resulting risks and dangers. Children may not play with the appliance. Cleaning and user maintenance may not be carried out by children without supervision. Keep children younger than 8 years away from the appliance and the connecting cable.
The appliance is not intended for regular use.
The appliance is not intended for commercial use.
Any other use or alteration of the appliance is deemed to be not for the intended purpose and involves considerable risks and dangers. The manufacturer is not liable for any damage resulting from use contrary to the intended purpose.


## Scope of delivery

Check the scope of delivery immediately after unpacking the appliance. Inspect the appliance and all the parts for damage. Do not put a faulty appliance or faulty parts into operation.

- MINI steam iron with Euro Schuko plug or MINI steam iron with UK plug or MINI steam iron with CH plug
- Measuring cup
- Storage bag
- Operating instructions

Pass on all the documents to other users too.

## Product overview

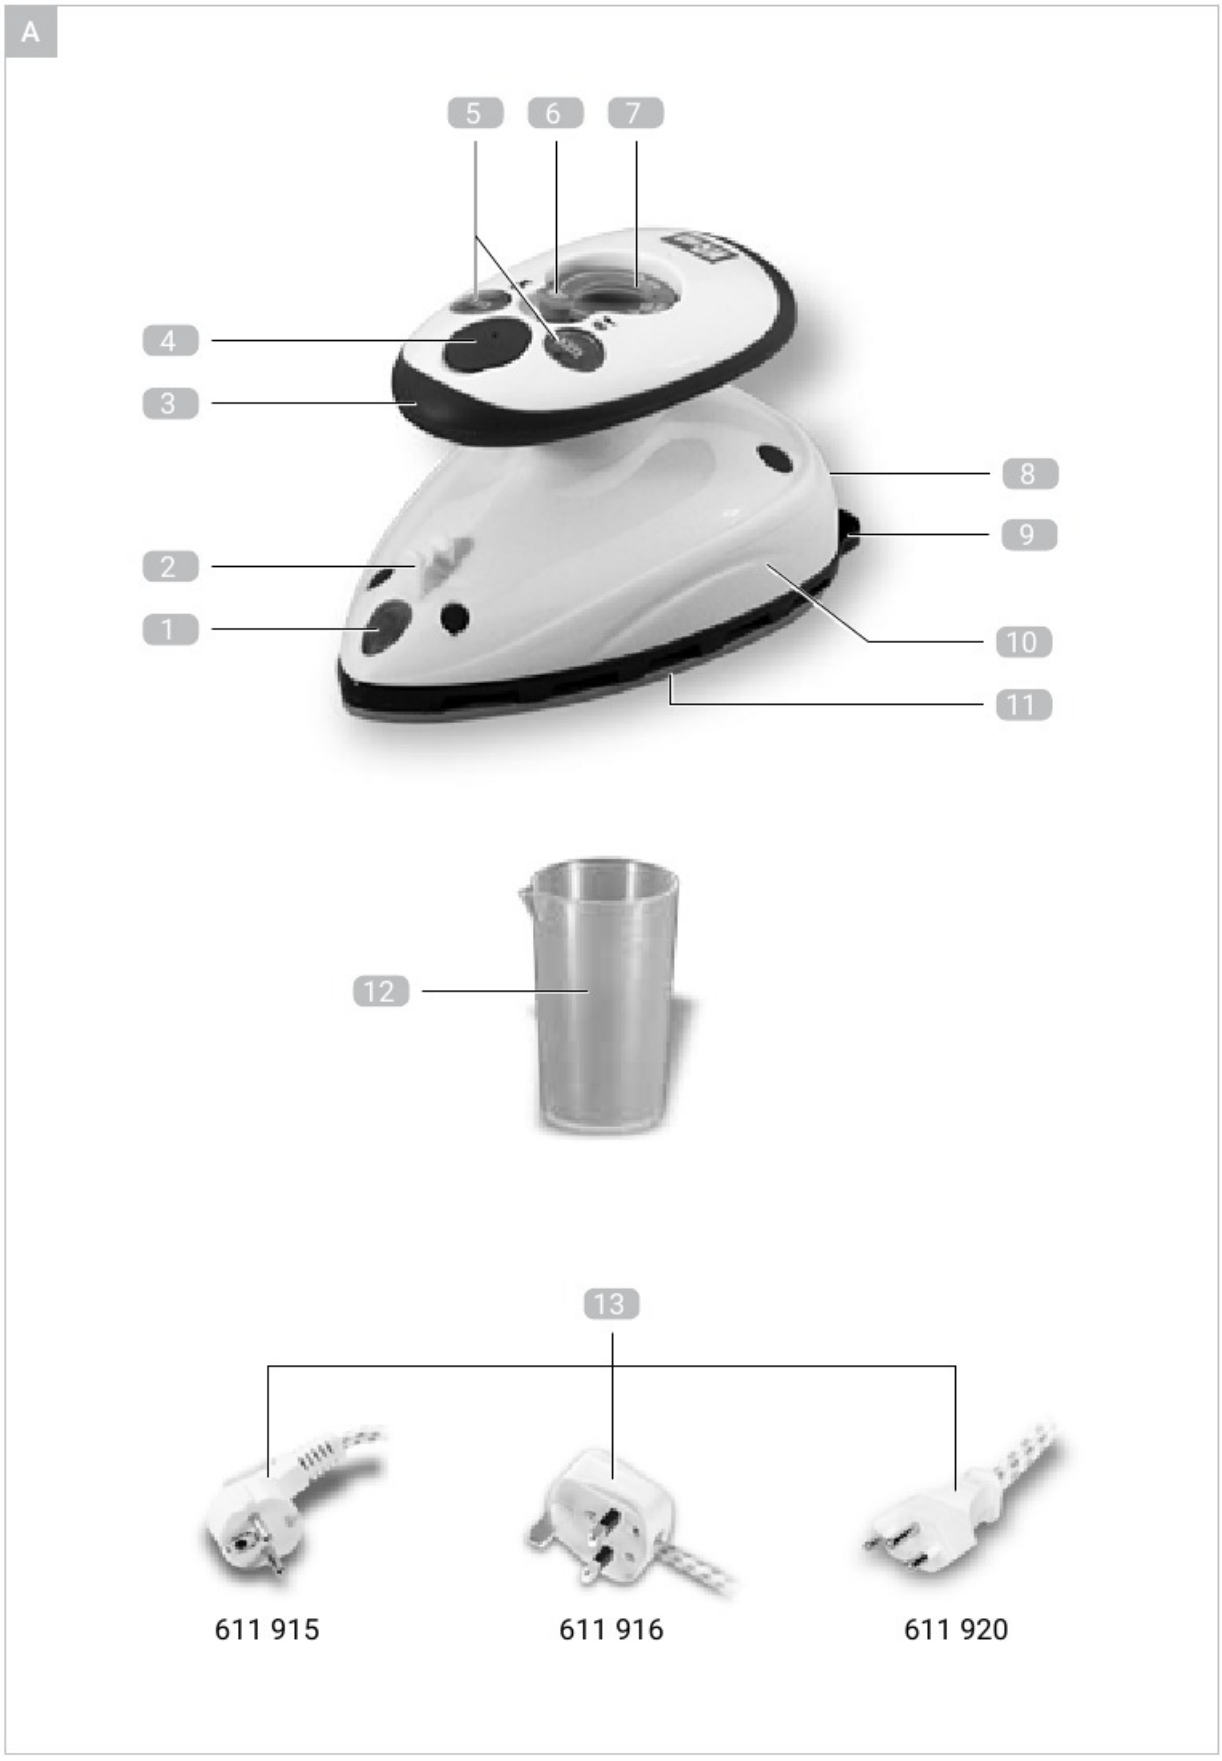


Overview of operating elements, see Fig. A.

1. Temperature indicator
2. Transportation retainer for mains plug
3. Ergonomic handle
4. Cover, water tank
5. Inspection window, water tank
6. Steam button
7. Temperature dial
8. Voltage switch 100-240 V
9. Feet
10. Housing
11. Soleplate
12. Measuring cup
13. Mains connector

## Operation

### Preparing the unit

1. Remove the packaging from the appliance.
2. Place the appliance on a flat, heat-resistant surface.

### Setting the mains voltage

**Attention!**
Pull the mains plug from the mains socket-outlet before setting the appliance mains voltage.

1. Check the available mains voltage.
2. Set voltage switch 8 with a pin or a paper clip to the correct mains voltage range:
    - 110-127 V e.g. for United Kingdom
    - 200-240 V e.g. for Europe and Switzerland

### Filling the water tank

You can use tap water to fill the water tank. If the water is very hard (high mineral content), we recommend that you mix the water with distilled water.

**Attention!**
Do not use pure distilled water. This could damage the appliance.

**⚠ WARNING ⚠**
Pull the mains plug from the mains socket-outlet before filling the water tank.

1. Fill the measuring cup with water.
2. Open cover 4 of the water tank and pour in the water.
   The current fill level is indicated in inspection window 5 . Fill the appliance up to the MAX mark only.
3. Close cover 4 .

## Switching the unit on

**Attention!**
Check whether the voltage switch is in the correct position before inserting the mains plug into the socket-outlet.

1. Stand the iron upright on feet 8 .
2. Plug the mains connector 12 into a properly installed socket-outlet.
3. Select the temperature level at which you would like to iron using temperature dial 7 :

| | |
|---|---|
| • | Low temperature, for synthetic and sensitive fibres |
| • • | Medium temperature, for wool |
| • • • | High temperature, for linen and cotton |

Temperature indicator 1 lights up once the temperature level has been selected. The appliance heats up. When the temperature indicator goes out, the appliance has reached the selected temperature.

## Ironing with steam

1. Turn the temperature dial 7 to the " " position.
2. To iron with steam, press steam button 6 so that it projects over the appliance.
3. To iron without steam, press steam button 6 again.

Steam ironing ON.
Steam ironing OFF.

**Attention!**
Always stand the appliance upright on feet 8 when it is not in use.

## Switching the unit off

1. Stand the iron upright on feet 8 .
2. Pull mains plug from the mains socket-outlet 12 .
3. Let the appliance cool down completely.
4. Empty the water tank when the appliance has cooled down.
5. Wrap the power cord around handle 3 and fasten the power cord in transportation retainer 2 .

## Troubleshooting

If you have any problems, contact our after sales support (see back of this manual).

| Problem | Possible cause | Remedy |
|---|---|---|
| **The appliance cannot be switched on** | No power supply. | Check whether the mains connector is plugged into an operational mains socket-outlet.<br>Pull the mains connector from the mains socket-outlet and then plug it back in. Switch the appliance on. |
| **No steam dispensed** | Water tank empty. | Fill the water tank. |
| | Temperature too low. | Turn the temperature dial to the " " position. |
| **The temperature indicator flickers or remains dark** | Electronic fault. | Unplug and stop using the appliance.<br>Contact our After Sales Support. |
| **The appliance hums or heats up sharply** | Electronic fault. | Unplug and stop using the appliance.<br>Contact our After Sales Support. |

| | | |
|---|---|---|
| | | |

## Cleaning

**Attention!**
Do not use any aggressive cleaning agents, brushes with metal or nylon bristles, or any sharp or metallic cleaning objects such as knives, hard spatulas and the like. These may damage the surfaces.

1. Unplug the mains connector from the mains socket-outlet before cleaning.
2. Let the appliance cool down completely.
3. Wipe down the appliance with a lightly moistened cloth. Then allow all the parts to dry completely.
4. We recommend the Prym iron cleaner to clean the soleplate.

## Storage

All the parts must be completely dry before storage.

- Always keep the product in a dry place.
- Protect the product against direct sunlight.
- Store the product in a securely locked place that is inaccessible to children at a storage temperature between 5°C and 20°C (room temperature).

## Technical data

| | |
|---|---|
| Model: | MINI steam iron |
| Article number: | 611 915, 611 916, 611 920 |
| Supply voltage: | 100-127 V~; 50/60 Hz<br>220-240 V~; 50/60 Hz |
| Power output: | 260-420 W (100-127 V)<br>343-408 W (220-240 V) |
| Temperature: | 65-200°C |
| Ironing system: | Steam |
| Water tank capacity: | 40 ml |
| Soleplate surface area: | 73 cm² |
| Dimensions: | 135 x 76 x 79 mm |

| | |
|---|---|
| Weight: | 0,42 kg |

## Safety



**General safety information**
Read all the safety information and instructions. Failure to adhere to the safety information and instructions can cause electric shock, fire and/or serious injury. Retain all the safety information and instructions for future reference.
The manufacturer is not responsible for damage or loss caused by:

- improper connection and/or operation.
- external application of force, damage to the appliance and/or damage to parts of the appliance resulting from mechanical effects or overloading.
- any type of alterations or modifications to the appliance.
- use of the appliance for purposes which have not been specified in these operating instructions.
- consequential damage or loss resulting from use contrary to the intended purpose and/or from improper use.
- moisture and/or inadequate ventilation.
- unauthorised opening of the appliance.

**WARNING**
Danger to life and risk of accident for children. Danger of suffocation and strangulation! Keep the appliance out of the reach of children. Children cannot recognise the risks and dangers posed by the product! Never leave children alone or unsupervised with the packaging material.

**DANGER**
**Danger to life!**
Damaged cables can cause a fatal electric shock. Do not use damaged cables.



**Fire hazard and risk of electric shock!**
Failure to adhere to all the following safety instructions increases the risk of electric shock, fire, serious injury and damage to property.

- Never use the cable to carry or pull the appliance.

- Only pull the cable by the connector from the socket-outlet. The cable may be damaged.
-  Do not use the appliance if damaged. Damage to the cables or the appliance increases the risk of electric shock.
- Lay the cables in such a way that you cannot trip over them or damage them.
- Do not kink the cable and do not lay it over sharp edges.
-  Make sure the appliance is always situated in a safe location. Do not expose the appliance to rain or wet conditions. Avoid spilling or dripping water or other liquids on the appliance. The entry of water into electrical appliances increases the risk of electric shock.
- Never store the appliance in such a way that it can fall into a bathtub or washbasin.
- Never reach for an electrical appliance if it has fallen into water. Pull the plug from the mains socket-outlet.
- Make sure all connectors and cables are free of moisture. Never connect the appliance to the mains power with wet hands.
- To avoid damage to the appliance, make sure the mains voltage matches the input voltage indicated on the appliance (100-127 V AC / 220-240 V AC).
- Plug the appliance into a correctly installed mains socket-outlet with earthing contacts only. The socket-outlet must be easily accessible even after the appliance has been plugged in.
- Do not operate the appliance with an external timer or a separate remote control system.
- Do not cover the appliance as it may then be damaged by excessive heating.
- Keep the appliance away from naked flames and hot surfaces.
- Stop using the appliance as soon as you detect smoke or an unusual smell.
- Do not attempt to disassemble or repair the appliance. Have a faulty appliance repaired or replaced by an authorised specialist workshop.
- Always let the appliance cool down completely before storing or transporting it.
- Do not use the appliance on a combustible surface or in the proximity of combustible materials.
- Do not leave the appliance unattended during operation.

 **DANGER** 

**Danger of injury!**

- Always iron textiles on a flat, heat-resistant surface. Do not iron textiles on your own body or any other person's body.
- **BURN HAZARD**
  The appliance gets very hot during use and generates steam. Attention! Risk of burning if improperly used. Avoid contact with the steam. Do not direct the steam at other persons or animals. Touch only the handle when using the appliance.
- Do not open the filler opening while the appliance is being used.
- **BURN HAZARD**
  Empty the water tank very carefully after use. Risk of burning by residues of hot water.

**Risk of damage!**

- Unplug the appliance before filling with water or emptying.
- Do not hold the appliance under the tap for filling.
- Fill the water tank with water only. Other liquids such as chemical cleaning agents, descaling agents, perfumes or scented oils may damage the appliance.

## Documents / Resources

### Available languages

Deutsch Français Español Mexicano Dutch Italiano Dansk Norsk Polski Suomi Português Español (Latinoamérica) Русский Български Čeština ε λ λ η ν ι κά English (UK) Eesti Hrvatski Magyar Bahasa indonesia Қазақша Lietuvių Português (Brasil) Română Română (Moldova) Slovenčina Slovenščina Shqip Kiswahili Türkçe O‘zbekcha

### Other ManualsLib Projects

www.manualslib.com
www.manualslib.de
www.manualslib.es

www.manualslib.fr

www.manualslib.nl

www.manualslib.mx

www.manualslib.tech 30+ languages