**User Manual of Product 1:**

Klein Tools 56064 Rechargeable Auto-Off LED Headlamp, Silicone Strap, 400 lms, All-Day Runtime, for Work, Running, Outdoor Hiking, Camping

# Comfort Twist Knitting Mill

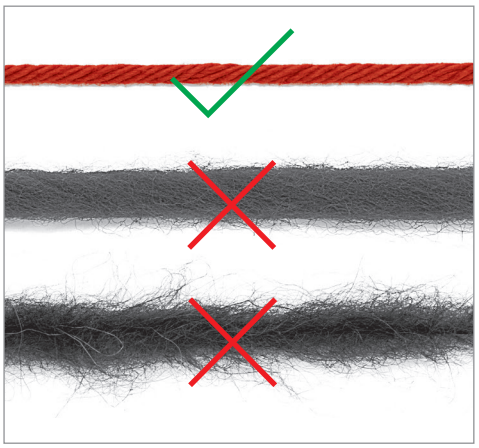


© 2020 PRYM CONSUMER USA

# Comfort Twist Knitting Mill



Knitting mill handle can be turned either direction for right- or left-hand use. However, once you start in a direction, you must continue to work in that direction until you are finished with the tube.



Picking the right yarn is also very important. Yarn that is labeled weight 0 to 3 is ideal. It should be smooth, not thick or fuzzy.



Knitting mill can be attached to table for use. Unscrew the lower section of the mill until the opening is slightly larger than edge of table. Tighten lower section to secure to table.

## Getting started:



Remove weight to use knitting mill. Weight is removed by grasping the weight and then tipping the weight to one side. Weight can be stored at bottom of mill when not in use.



All hooks must be completely opened, before use. Push latches down if necessary. It will be helpful to have a large metal tapestry needle (size 16) for threading knitting mill.

# Comfort Twist Knitting Mill




Loop yarn end through outside hooks on mill. Thread tapestry needle with yarn end and insert down through center of mill until it comes out of the bottom.



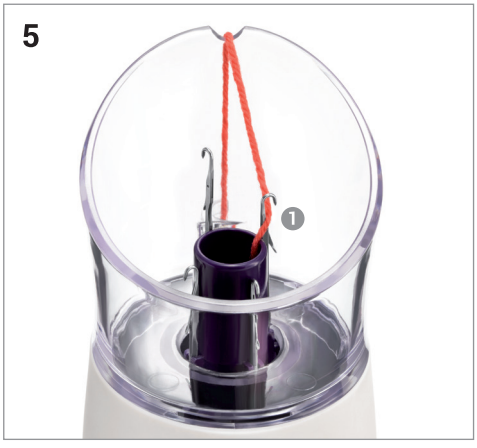

Make sure all latches on hooks are down and there is slight tension on the yarn.




Hold the yarn end securely with one hand. You can keep the needle on the yarn end for some extra weight. Use other hand to turn handle.




Remember the handle can be turned in either direction but you must continue with that direction until your tube is finished.



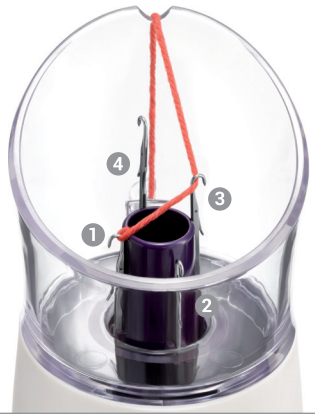

Place the yarn in the first hook. Turn handle slowly.




Skip the second hook and continue to turn handle slowly.

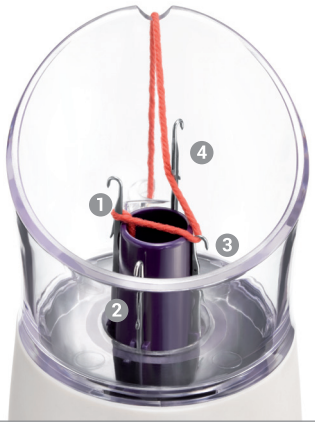
# Comfort Twist Knitting Mill

7




Place yarn in third hook. Turn handle slowly.

8




Skip the fourth hook.

9



Now start one full round, catching yarn in every hook.

10



If the working yarn is not popping over the latch each time, it may be necessary to apply a little more tension to the yarn end.

11



Work slowly until first full round is complete.

12



Tie weight to yarn end.

# Comfort Twist Knitting Mill

13



Continue to turn handle until tube reaches desired length. To avoid skipped stitches, it may be necessary to apply tension to the working yarn. Allowing the yarn to run through your hand before entering the outside hooks, may be all the extra tension that is needed to keep your knitting mill running smoothly.
Pull downward on the cord from time to time.

14



As needed, weight can be slide up the tube and locked in place. To finish tube, cut working yarn and continue to turn handle until all of the yarn is stitched and tube pops off knitting mill. Finish end by running yarn through last 4 stitches.